

Onity XPP programmer battery maintenance

Note The XPP programmer can be on 24/7 charging because an internal regulator only charges batteries as needed.

Steps to replace batteries:

- 1) Download data from XPP programmer, if possible, prior to performing maintenance.
- 2) Remove power charger connection.
- 3) Remove back cover on XPP programmer to access battery compartment.



- 4) Replace rechargeable batteries as needed with Energizer Rechargeable type. These should be nickel-metal hydride (NiMH) cells only.
- 5) Recharge unit for 8-12 hours.
- 6) Test XPP programmer operation.